

# Configuration of MWI numbers

Add Message Waiting numbers via Voice Mail > Message Waiting. These are used by Callisto to switch the MWI lamp on and off.

Message Waiting Information	
Message Waiting Number*	<input type="text" value="9991"/>
Partition	<input type="text" value=" &lt; None &gt;"/>
Description	<input type="text" value="Callisto_On"/>
Message Waiting Indicator*	<input checked="" type="radio"/> On <input type="radio"/> Off
Calling Search Space	<input type="text" value=" &lt; None &gt;"/>

1. Select Add New.
2. Enter a free internal number and set Message Waiting Indicator to On.
3. Enter another number and set Message Waiting Indicator to Off.

These two numbers must be entered in the Callisto system at System > System Parameter.