

# Setup

## Installation

SMCS Alarm is installed through Callisto's Open Application Manager. The installation and updating process for OAM applications is described in the chapter [Options](#) of the Callisto platform administration manual.

## Privileges

The following application privileges can be assigned to a user for the SMCS Alarm application. For setting user privileges, see the chapter [User administration](#) of the Callisto platform administration manual.

Settings	Provides access to the <a href="#">Settings</a> tab.
Messages	Provides access to the <a href="#">Messages</a> tab.
AlarmGroups	Provides access to the <a href="#">Alarm Groups</a> tab.
Reports	Provides access to the <a href="#">Reports</a> tab.

## Access



*Configure icon*

Administrators can access the SMCS Alarm configuration by navigating to System > Open Application Manager in the main menu. In the tab Applications, locate the SMCS Alarm instance and click on the *Configure icon*.

Users who were granted privileges to access the SMCS Alarm instance can do so by navigating to Applications in the main menu and clicking on the name of the SMCS Alarm instance.