Configuration of Voice Mail Pilot number

The settings in this step define the Callisto Voice Mail number in the Cisco Unified Communications Manager. Also, the Voice Mail keys on Cisco's IP phones are configured for Callisto.

1. Open Default via Voice Mail > Voice Mail Pilot.
2. Enter the Callisto Voice Mail number.
3. Check Make this the default Voice Mail Pilot for the system

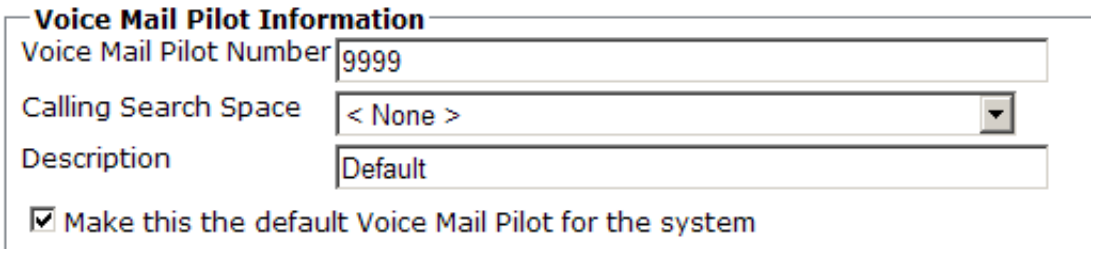

This number must be identical to the Voice Mail number entered in the Callisto web menu via System > System Parameter.

Open Default via Voice Mail > Voice Mail Profile.
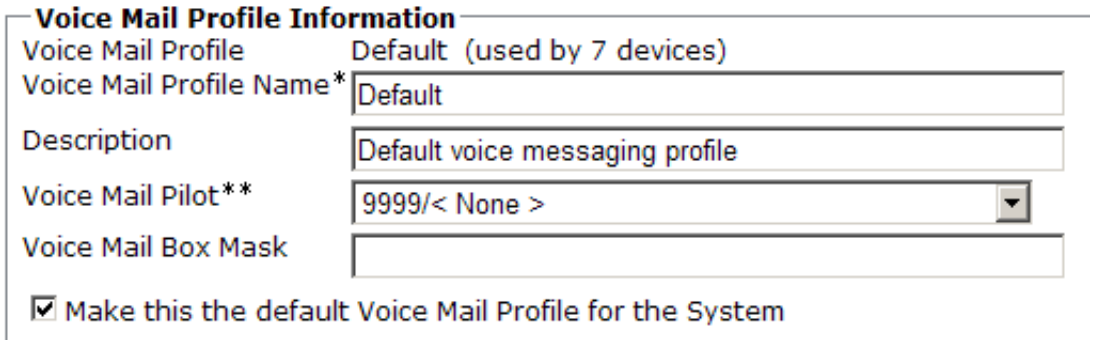
Select the the new configured Voice Mail Pilot at Voice Mail Pilot.