SIP Profile configuration

SIP is the VoIP protocol of the Callisto Platform. Via a SIP Profile, general SIP settings can be configured.

1. Add a new SIP profile or copy the Standard SIP Profile via Device > Device Settings > SIP Profile.

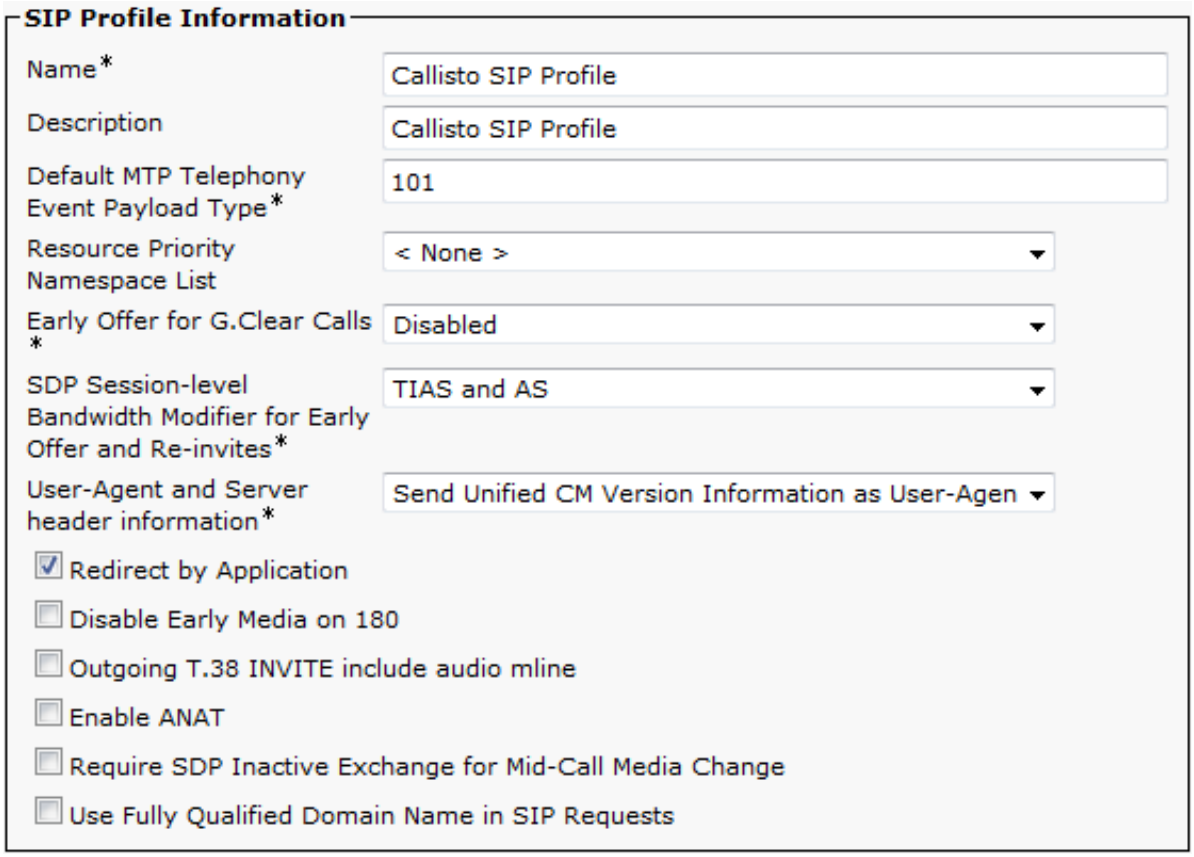

   Check Redirect by Application.
2. Add a new SIP Trunk Security Profile via System > Security > SIP Trunk Security Profile.
   For non-secure communication: For encrypted communication:

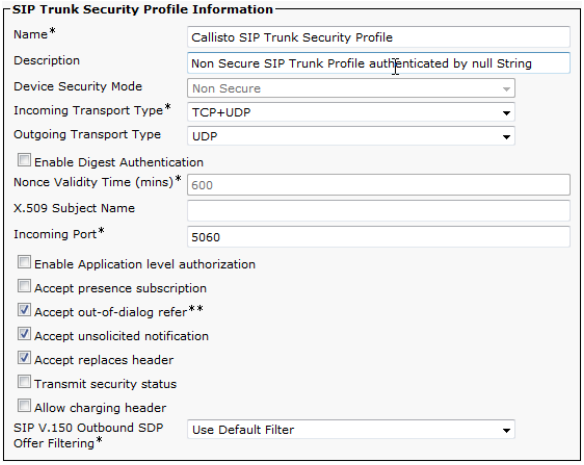

It is crucial to set Outgoing Transport Type to UDP.

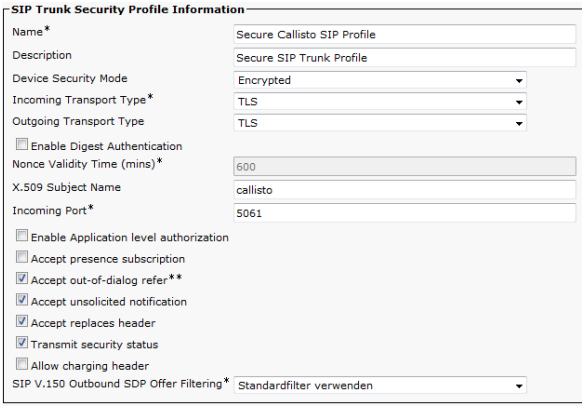

You can use the settings as seen as on the screenshot.